


E Fitting Instructions:
D Montageanleitung:
NL Montage instructie:

VPS SIDE BAR
VPS SEITENSCHWELLER
VPS SIDE BARS

VW T6.1 2020➔




6559014
6559017

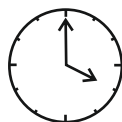

45 Min.

All rights reserved to modify the text

Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis
 Herramientas necesarias / Utensili necessari / Verktuyg somsomkrävs

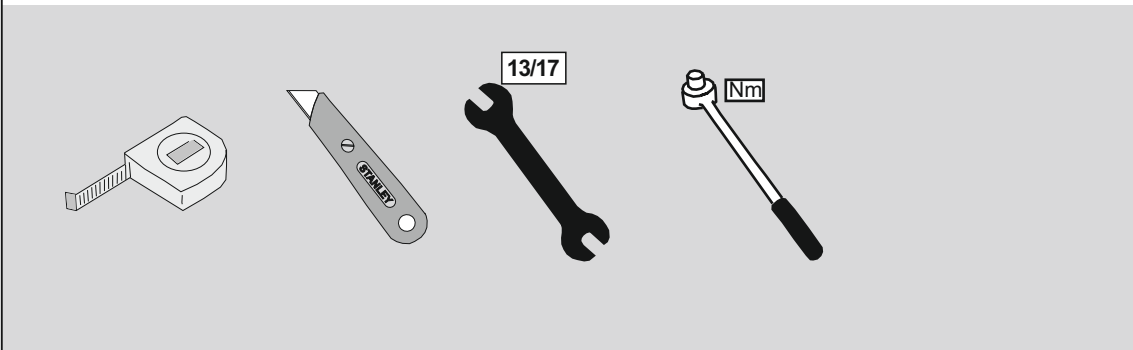


Parts list / Teileliste / Onderdelenlijst / Liste de pièces
 Lista de accesorios / Lista di pezzi / Artikel lista















| | | | |
|----------|-------|----------|-----------|
| A | | 2x | |
| B Front | | C Rear | |
| | | 2x | 1x |
| | | M8 15x30 | M8 15x40 |
| 2x | 8x | 2x | 4x |
| M8x20 | M8x20 | M8x25 | M8 |
| 4x | 8x | 4x | 2x |
| M8 | M8 | M10x30 | Ø10 40x40 |
| 2x | 4x | 4x | |
| M10x30x4 | M10 | M10 | |


REPLACE ORIGINAL JACK
 ORIGINAL WAGENHEBER AUSTAUSCHEN
 ORIGINELE KRIK VERVANGEN

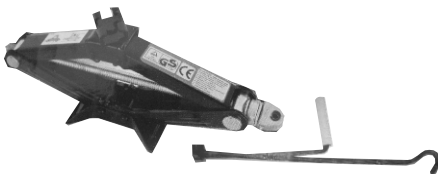



| | | | | |
|-------|-------|----|----|----|
| 10x25 | Ø4 | M4 | M4 | M4 |
| Ø 53 | 600mm | | | |

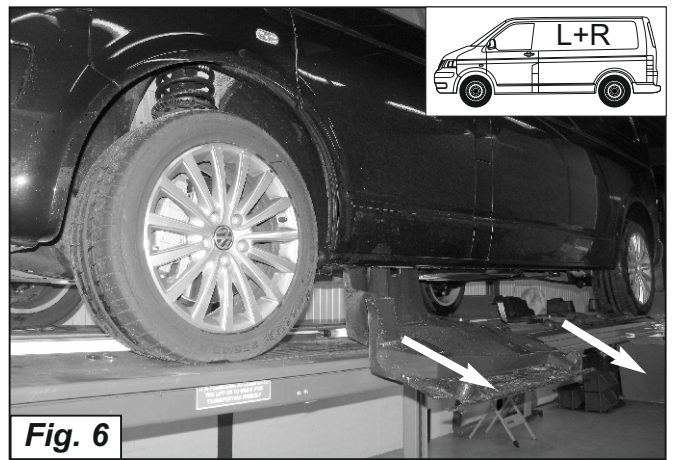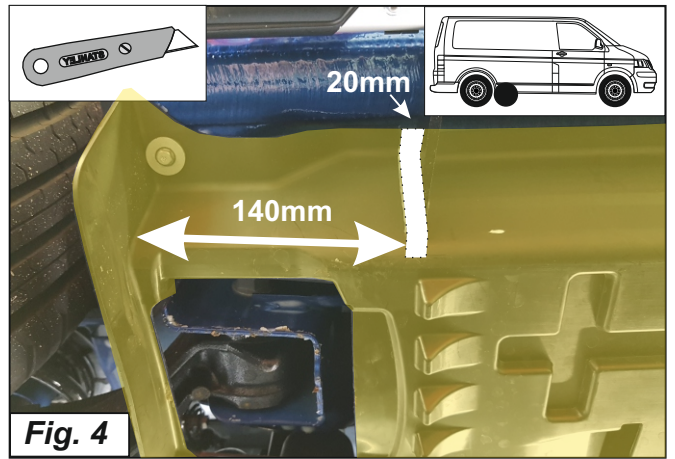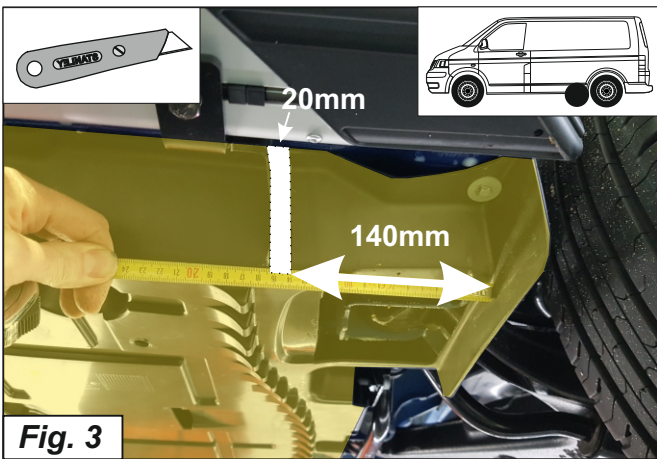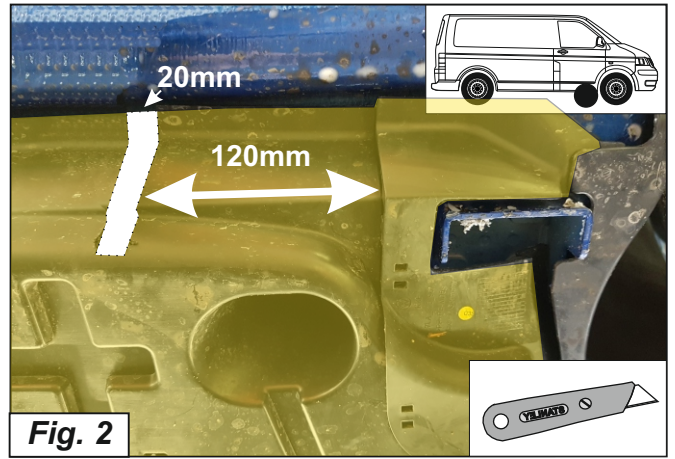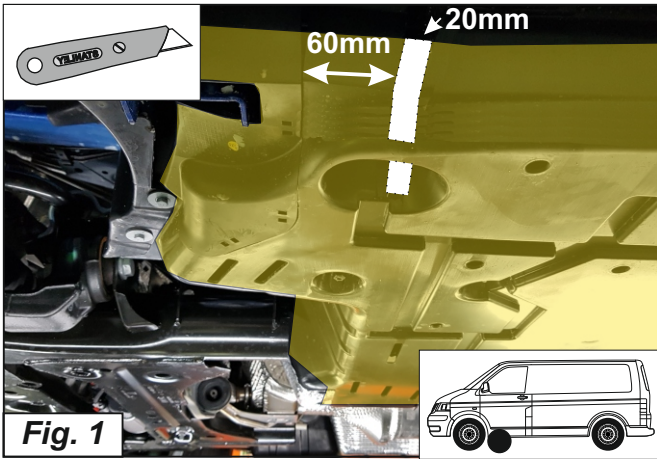

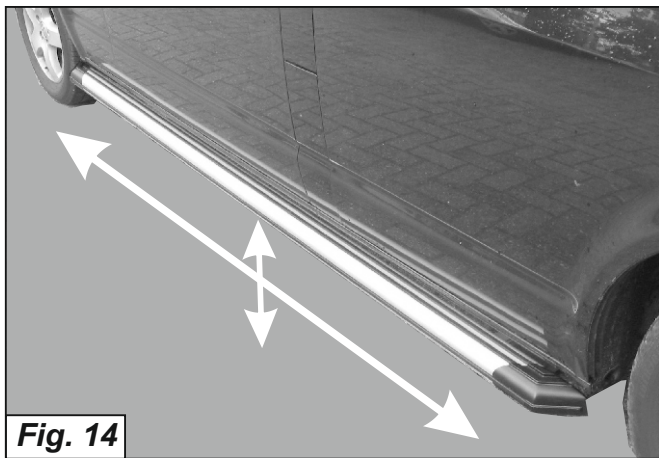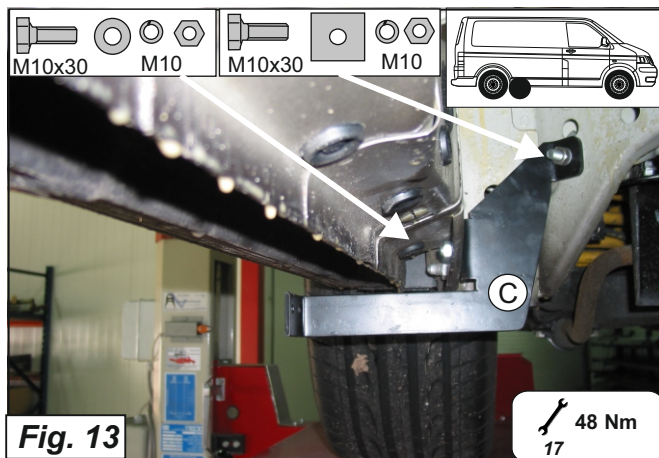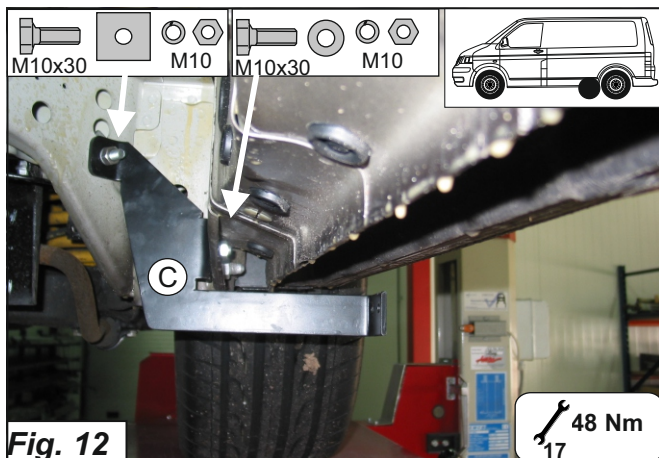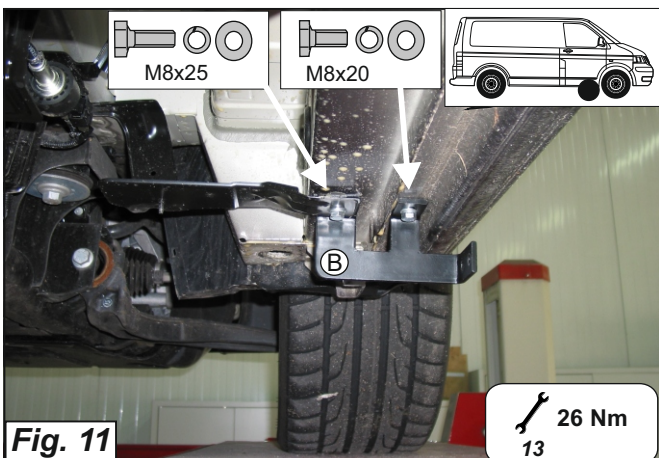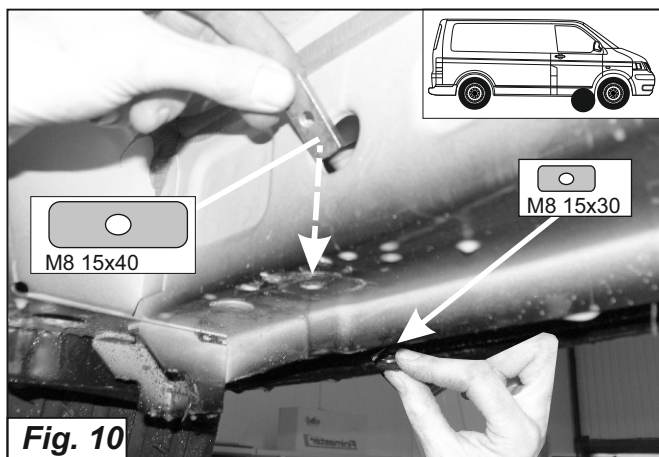
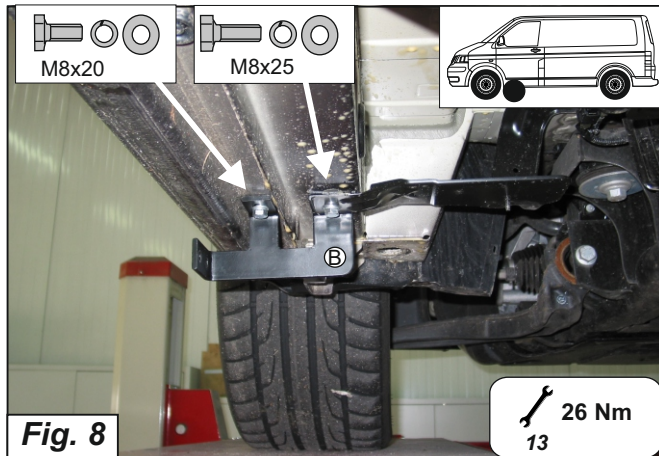
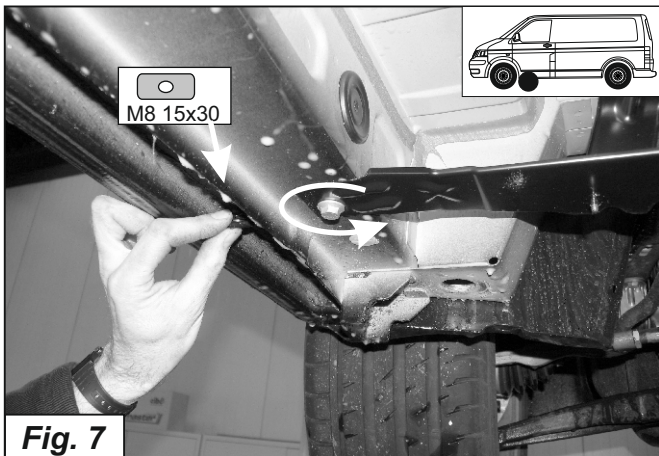


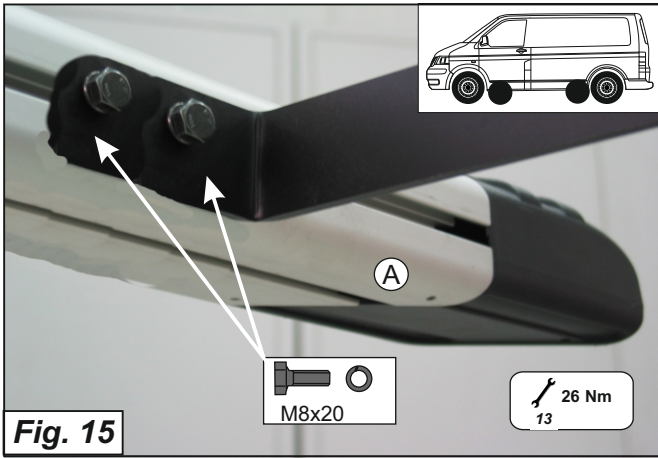

Transporter without upholstery

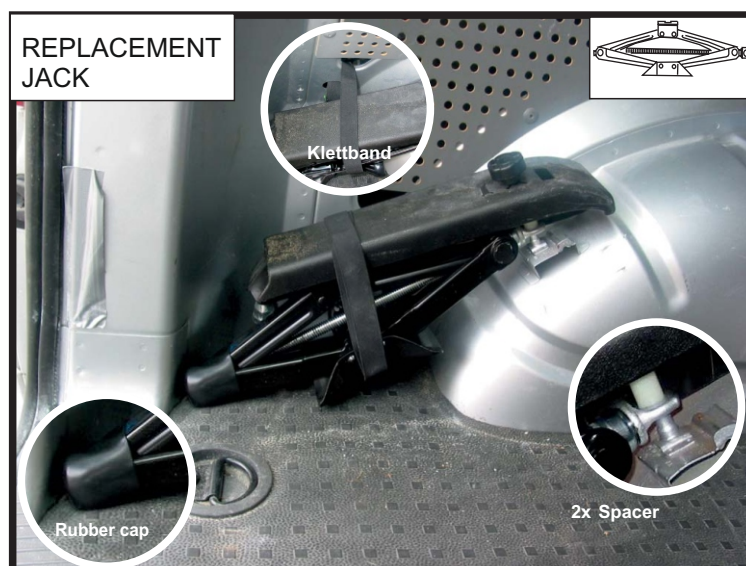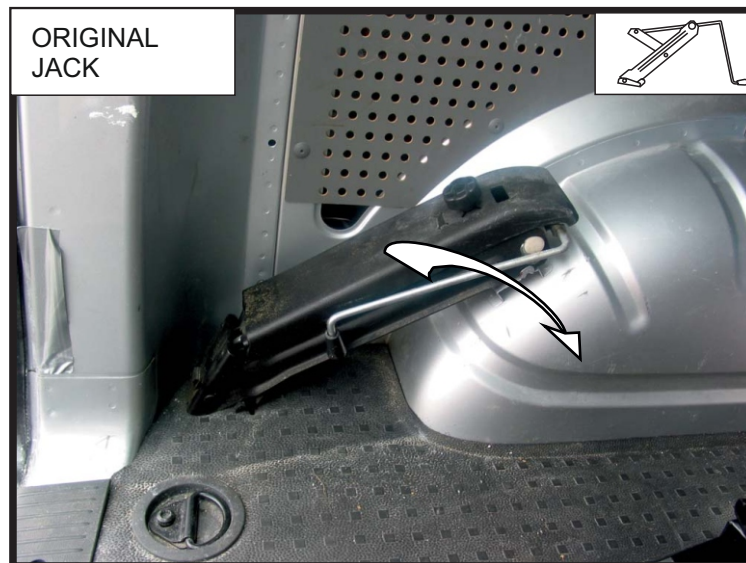

Transporter with upholstery

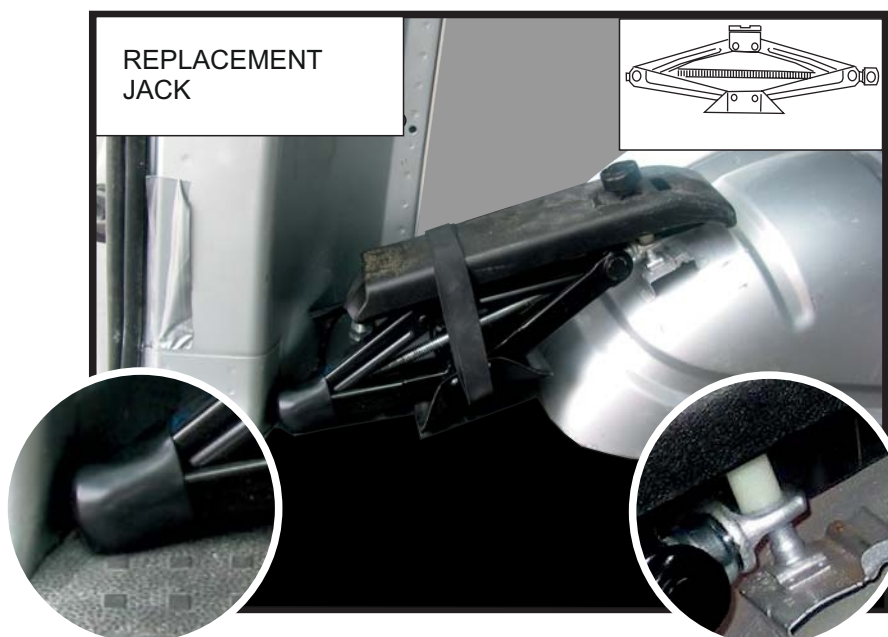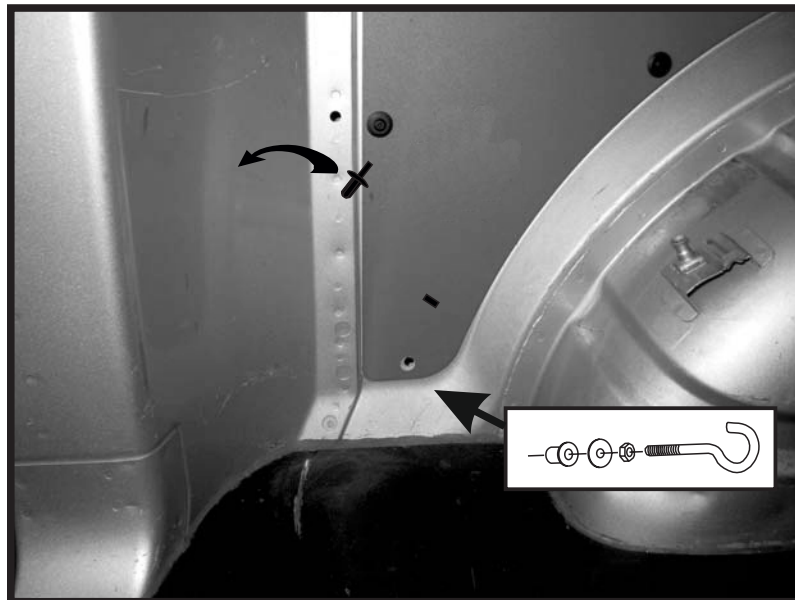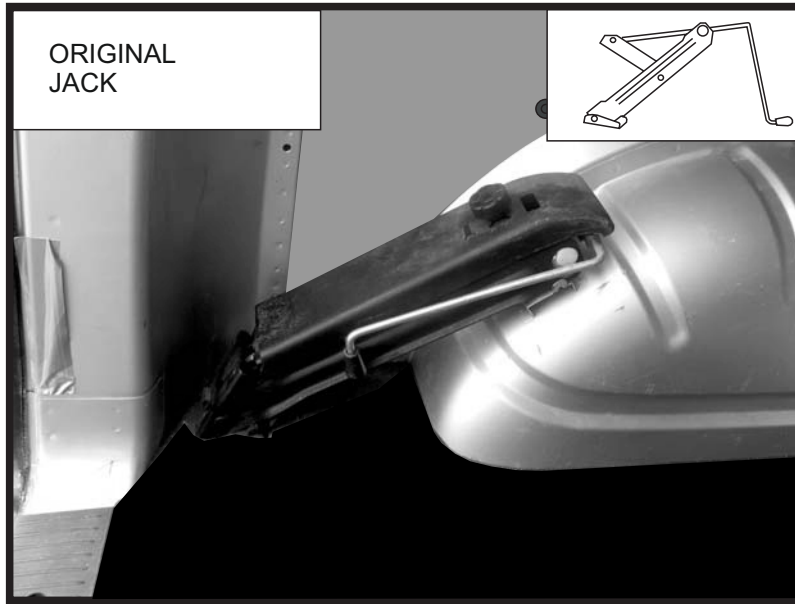

Rubber cap

2x Spacer

Multivan / Caravelle

